




GASOLINE TANK KIT #700462 INSTALLATION

Install the kit according to the following instructions:

ATTENTION: The hose must never come into contact with the engine's muffler or any other hot surface. This will cause great material damage.


For Versatile Plus 700580 & 700582 Snowblowers:

1. Remove the two 5/16" flange nuts (item 1) and 5/16" x 1/2" hex bolts (item 2) on the **right hand side** of snowblower.
2. Insert the threaded ends of the support (item 3) in the holes and secure in place with the two 5/16" flange nuts. Tighten firmly.
3. Insert the gas tank into the support and thread the hose between the engine and the guard (item 4).
4. Connect the hose on the engine gas pump.

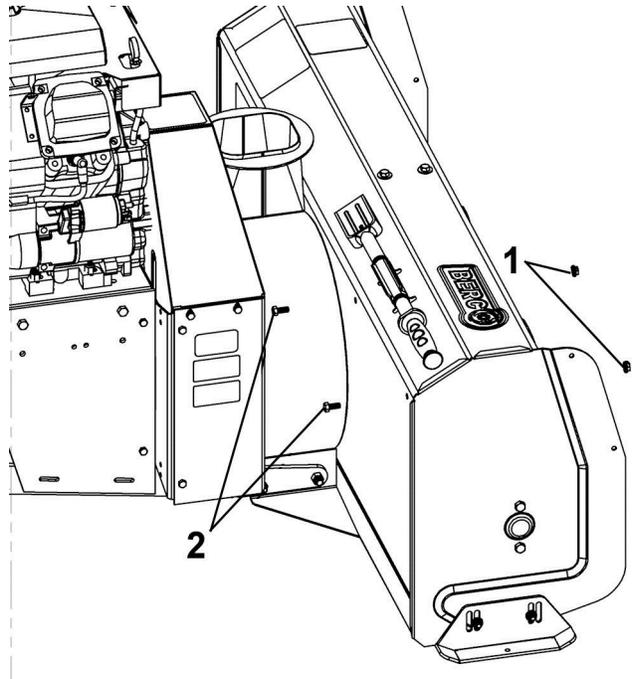

For Versatile 700460 & 700480 Snowblowers

1. Remove the two 5/16" flange nuts (item 1) and 5/16" x 1/2" hex bolts (item 2) on the **left hand side** of snowblower.
2. Insert the threaded ends of the support (item 3) in the holes and secure in place with the two 5/16" flange nuts. Tighten firmly.
3. Insert the gas tank into the support.
4. Connect the hose on the engine gas pump.

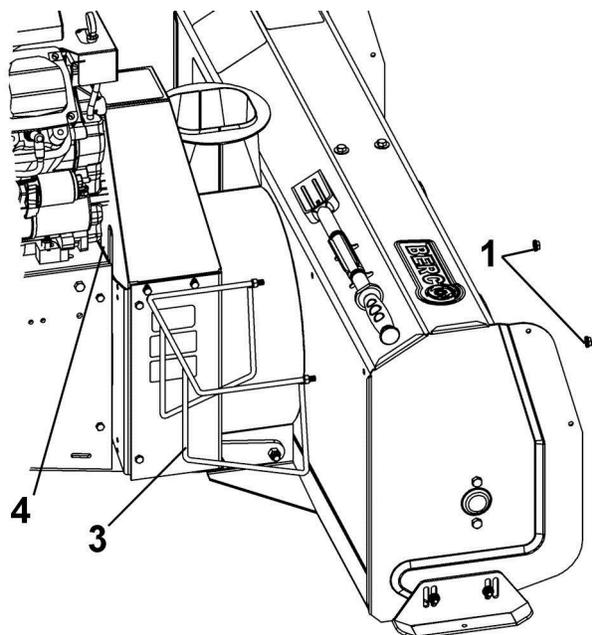


ENSEMBLE DE RÉSERVOIR D'ESSENCE # 700462 INSTALLATION

Installer l'ensemble selon les instructions suivantes:

ATTENTION: Le boyau ne doit jamais venir en contact avec le tuyau d'échappement du moteur ni aucune autre surface chaude. Ceci pourrait causer des dommages matériel considérable.

Pour les Souffleuses Versatile Plus 700580 & 700582

1. Retirer les deux écrous ;a bride 5/16" (item 1) et les boulons hex 5/16" x 1/2" (item 2) du **côté droit** de la souffleuse.
2. Insérer les bouts fileté du support (item 3) dans les trous et sécuriser en place avec les deux écrous à bride 5/16". Serrer fermement.
3. Insérer le réservoir d'essence dans le support et passer le boyau entre le moteur et le garde (item 4).
4. Brancher le boyau sur la pompe à essence du moteur.

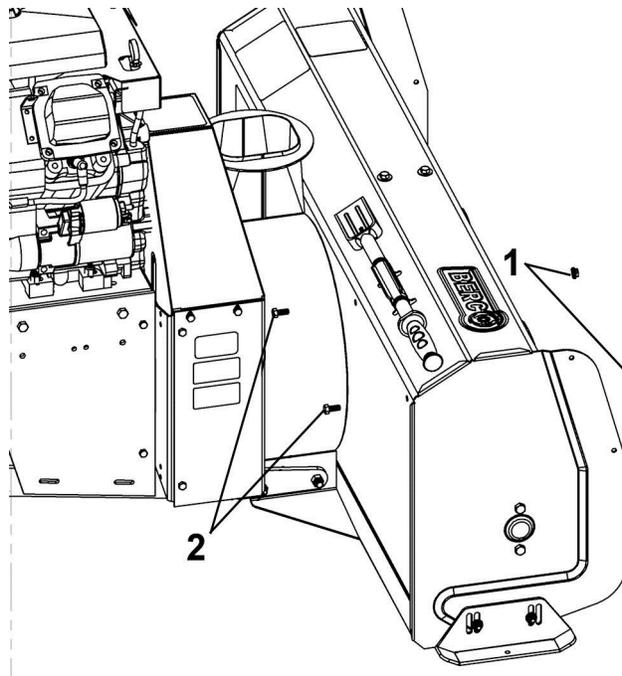

Pour les Souffleuses Versatile 700460 & 700480

1. Retirer les deux écrous ;a bride 5/16" (item 1) et les boulons hex 5/16" x 1/2" (item 2) du **côté gauche** de la souffleuse.
2. Insérer les bouts fileté du support (item 3) dans les trous et sécuriser en place avec les deux écrous à bride 5/16". Serrer fermement.
3. Insérer le réservoir d'essence dans le support.
4. Brancher le boyau sur la pompe à essence du moteur.

